

# VX-1


## **Owner's Manual**

Thank you for using our Mobile Phone.  
To guarantee the best performance, please read this manual  
carefully and keep it for further use.

We reserve the right to make modifications on print errors or update  
specifications without prior notice.





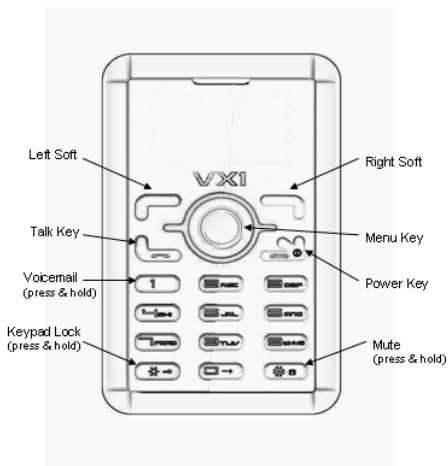

## General Features

### Turn on the phone

1. Press and hold **Power** key to turn on the phone. The LCD screen will turn on.  
If SIM card is not properly installed, a warning will appear on the screen. Press and hold **Power** key to turn off, and re-install the SIM card properly.
2. The phone will automatically search for network after turn on.

### Warning!

If the phone has found an authorized network operator, the name of the network and signal intensity will be displayed.

If not, you can only use the emergency calls and other non-communication service.

### **To make Domestic calls**

In standby, enter a phone number (with region code and area code), Press Right soft key to delete wrong entry. Then press **Talk** key to dial the number. If the call gets connected, the call status will be displayed.

### **To reject a call**

When you have incoming call, press **Right soft** key or **End** key to reject it.

### **To answer a call**

When the phone connects, it will give a ring or vibration. Or show the caller's name if your network support it. The caller's name displayed depends on whether you have saved it in your phonebook. Press **Left soft** key or **Talk** key to answer.

### **To end a call conversation**

When you have finished talking, press **End** key to end a call. Also, if you want to terminate a call after you dialed, press **End** key.

### **Emergency calls**

You do not have to own a SIM card to make emergency calls. Emergency calls may differ from different network operators, to make your local emergency calls, please contact your network operators.

### **To make an international call**

To make an international call, press and hold "0" key until a + sign appear. Enter the country/region code, area code (without the first zero), and the phone number.

### **To dial from contact list**

Find the number you want to dial in your phonebook list, press **Talk** key to call the selected record.

### **To dial from call list**

All the numbers you dialed are saved in the call list. When the memory gets full, the old numbers are automatically deleted. To view the call list:

1. In standby, press **Talk** key. The call records will display.
2. Press **Talk** key to dial out the latest call, or press **Up** or **Down** arrow key to select the record and then press **Talk** key to dial out the number.

### **Call options**

While in a call, press **Left soft** key to enter calling options or press **Right soft** key to hold the call. In call options, you can

- Mute
- Disconnect
- Enter Main Menu

## Power off

In any interface, press and hold **End** key to turn off your phone.

## Menu

### Short Message

1. Inbox
2. Create message
3. Outbox
4. Draftbox
5. Voice mail
6. Message setup
7. Broadcast message
8. Delete all



### Phonebook

1. Search
2. Add contact
3. SIM phonebook
4. Storage status
5. Delete all entries



### Settings

1. Phone settings
  1. Display settings
    - LCD contrast
    - Back light
    - Greeting note
    - Language
    - Date Time display
  2. Security settings
    - Power on PIN1
    - Change PIN2
    - Phone Code
  3. Clock settings
    - Time & date setting
    - Date display format
    - Time display format
  4. Own number
  5. Keypad Locking settings
  6. Text input settings
  7. Factory Default



### Call records

1. Received calls
2. Dialed calls
3. Missed calls
4. Call Duration

2. Network settings
  1. Call waiting

2. Call forwarding
  3. Call barring
  4. Network select mode
3. Call settings
1. Send my call ID
  2. Auto re-dial
  3. Any key answer
  4. Line select
4. Shortcut settings
5. Profiles
- Standard
  - Conference
  - Outdoor
  - Mute



### **Alarm**

1. Alarm 1
2. Alarm 2
3. Alarm 3

### **Short Message (SMS)**

SMS is a network service, which enables you to send, receive, and edit all kinds of text messages.

#### **Write message**

In the Short message window, select 'Create message' menu. The text message box will display and you can start writing your message.

After the last text input, press **Accept** and then select;

- **Only send:** Sends out the message.
- **Only Save:** Saves the message into the Draftbox.
- **Send and Save:** Sends out and saves the message.

Press **Accept** and then input the telephone number, or press **Search** to select the message recipient from the Phonebook list. Press **Back** to return to the previous menu or press **End** key to return to standby mode.

## Read Messages

You can check the messages you received in the **Inbox** menu. A closed and opened envelope icon indicates the messages you have and haven't read.

When you received a new message, your phone will ring and or vibrate.

Press **Left soft** key to read the message. You can also go to the Inbox menu to read the messages.

If the inbox is full, a message prompt will display to inform that the memory is full.

To continue receiving messages, please delete some message/s. If a new message is too long for the capacity, some of the message content may not be displayed and might lose.

When viewing a message in the Inbox, press **Option** and then select;

- **Delete:** to delete the message.
- **Text reply:** to reply a message to the sender.
- **Forward:** to forward the message to others.
- **Edit:** to edit the content of the message.
- **Dial back:** to call the message sender.
- **Extract number:** to extract the telephone number and then save it to the Phonebook memory.

## Outbox

The **Outbox** saves the messages you sent when you select the **Send and Save** option.

When viewing a message in the Outbox, press **Option** and then select;

- **Delete:** to delete the message.
- **Forward:** to forward the message to others.
- **Edit:** to edit the content of the message.
- **Dial back:** to call the message sender.
- **Extract number:** to extract the telephone number and then save it to the Phonebook.

## Draftbox

The Draftbox stores the messages that you save and or messages that failed to send out.

When viewing a message in the Draftbox, press **Option** and then select;

- **Delete:** to delete the message.
- **Forward:** to forward the message to others.
- **Edit:** to edit the content of the message.

## Voice mail

When you cannot answer a call, your phone will automatically transfer the call to your voicemail, and allow the caller to leave a message. Enter the voice mail menu; select **"Listen to Voice Mail messages"** to hear the voice mail recording or select **"Voice mailbox number"** to save or edit your voice mailbox number.

***This service needs support of network operator. You might have to first apply for this service. Please contact your local network operator.***

## Message setup

Includes options for changing the settings of message services such as; Service Center, Protocol Type, Validity Period, Status Report, Reply Path, Storage Media and Service status.

### ● Service center:

1. In the Message setup display, select Service center.
2. Press **Accept** to view/change the service center number, then press **Accept** to confirm.

**Note: The Service Center number is usually assigned by the SIM card provider.**

### ● Protocol type:

1. In the Message setup, select Protocol type.
2. Press **Accept** to view/change Protocol Type setting, then press **Accept** key to confirm.

### ● Validity period:

1. In the Message setup, select Validity period.
2. Press **Accept** to view/change the length or time for which the network should attempt to deliver your message, then press **Accept** key to confirm.

### ● Status report:

1. In the Message setup, select Status report.
2. Set to **"On"** to request the network to send a delivery report to the sender, otherwise select **"Off"** option.

### ● Reply path:

1. In the Message set up, select Reply path.
2. Set **"On"** to request the network to send a reply back information to the receiver, or select **"Off"** option.

### ● Storage status:

1. In the Message set up, select Storage status.
2. Press **Accept** to display the total and used capacity for both SIM and Phone memory.
3. Press **Accept**.

## Broadcast message

Request the network to send text messages on the selected topics. The availability of this service depends on the network operator. There are three options in the SMS broadcasting menu:

- **Topic:** to select the topic you want to receive,
- **Language:** to select other languages,
- **Service status:** select the setting to On/Off mode. (Set to "On" to receive broadcast message from the network operator, otherwise set to "Off".)

## Delete all

1. In the Messages display, select Delete all.
2. Select; Delete all messages, Delete inbox messages, Delete outbox messages, or Delete draftbox messages.
3. Press **Accept**.

## Phonebook

Store your contact list in the phonebook menu. The memory depends on the capacity of your SIM card.

## Browse

Select "**Search**" when you enter the phonebook menu. Press up or down Navigation keys to scroll through the contact list. Or press the first letter of a name, and the search will jump to the first entry beginning with that letter.

## Add contact

Select "**Add contact**" in the menu to add a new contact in the phonebook.

1. Input the name and then press **Accept**.
2. Input the number and then press **Accept**.
3. The contact will be automatically saved in the SIM phonebook memory.
4. Repeat steps 1 to 2 to add more contacts.

## SIM phonebook

To view the SIM phonebook list.

1. In the Phonebook display, select SIM phonebook.
2. Press **Accept**.
3. Press **Up** or **Down** key to scroll through the list.

## Storage status

1. In the Phonebook display, select Storage status.
2. Press **Accept** to view the memory status.

### Speed dial

This option enables you to set up a total of eight Speed dial numbers. After setting a specific contact in the Speed dial memory, enter the Speed dial number and press **Talk** key to call.

In the Phonebook menu, select Speed dial:

1. Select a Speed dial key location where you wish to store the number.
2. Press **Accept**.
3. Select the phonebook record you wish to assign and then press **Accept**.

To make a Speed dial call;

In standby mode, press the Speed dial key and then press **Talk** key to automatically dial out the stored number.

### Delete all entries

Select "**Delete all entries**" to erase all of the records in the Phonebook memory.

In the prompt, press **Accept** to confirm the operation or press **Back** to cancel and return to the previous menu.

### Call Records

This phone can record Incoming calls, Outgoing calls, Missed calls, and Call duration.

#### Incoming calls

Shows the answered incoming call records. It shows the telephone number and/or the name, if the caller's number is identified with the name and number that is stored in the SIM Phonebook memory, date, and time of the call.

1. In the Call Records display, select Incoming Calls.
2. The incoming call list will display. Select the record you wish to view
3. Press **Option** and then select; Dial to, Send message to, Delete, Save number, Delete All, or Show number.
4. Press **Accept**.

#### Outgoing calls

Shows the list of phone numbers that you have most recently dialed or attempted to call.

1. In the Call Records display, select Outgoing calls.
2. Select the record.
3. Press **Option** and then select;  
Dial to, Send message to, Delete, Save number, Delete All, or Show number.

## Missed calls

Shows the latest records of unanswered incoming calls, if available from the network.

1. In the Call Records display, select Missed calls.
2. Select the record.
3. Press Option and then select;  
Dial to, Send message to, Delete, Save number, Delete All, or Show number.
4. Press Accept.

## Call duration

Shows the total call count, and the total elapsed time of Incoming calls, Outgoing calls, and the most recent last call.

1. In the Call Records display, select Call Duration.
2. The LCD screen will display the call duration time for  
Outgoing calls, Incoming calls, and the Last call.
3. Press **Reset** to reset the time duration back to zero.

## Settings

In Settings, you can setup the phone to your preference.

### Phone settings

#### ❖ Display settings

Sets the behavior of the LCD screen display.

- LCD contrast: adjust the LCD screen contrast setting.
- Back light: set to Always on, Always off, 15 seconds on, or 30 seconds on.
- Greeting note: Enable or Disable.
- Language: select English or Spanish.
- Date Time display: Enable or Disable.

#### ❖ Security settings

Sets the security information to protect the phone and SIM card against unauthorized use. PIN can be used to protect your SIM against unauthorized use.

- Power on PIN1: select ON, OFF, or Change PIN.
- Change PIN2
- Phone Code: select ON, OFF, or Change Phone Code.

#### ❖ Clock settings

Sets the date and time.

- Time & date setting: sets the clock and date on your phone.
- Date display format: sets the format of the date display.
- Time display format: sets format of the time display.

#### ❖ Own number

### ❖ **Keypad Locking settings**

- Select Disable, 30 seconds, or 60 seconds.

### ❖ **Text input settings**

Sets the first text input mode option when writing a message.

### ❖ **Factory Default**

Enter the code and the phone will return all settings to the factory preset condition.

## **Network settings**

### ❖ **Call waiting**

Activates or deactivates the Call waiting function. While in a call and with Call waiting activated, and another call comes in, short tones will be heard and the second caller's number will be displayed.

- Set to Activate, Deactivate, or to Check the status.

### ❖ **Call forwarding**

You can transfer the incoming calls to your voice mail or another number. When turned on, you will be asked to enter the phone number you want to transfer your call to.

- Unconditional: transfer all calls to the designated number.
- When Busy: when this phone is busy from a current call and you have another call, the call will be transferred to the designated number.
- No Answer: when the call is not being answered.
- Unreachable: when the phone cannot be reach.

### ❖ **Call barring**

Restrict outgoing and incoming calls; a password from your service operator is required.

The following calls can be restricted:

- All outgoing calls
- All Int'l calls
- Int'l except to home
- All incoming calls
- Incoming roaming calls

### ❖ **Network Select mode**

- Automatic selection.
- Manual selection.

## **Call settings**

### ❖ **Send my call ID**

- Sets to Default setting, On, or Off

### ❖ **Auto re-dial**

- Enable
- Disable

### ❖ **Anv kev answer**

- Enable
- **Disable**
- ❖ **Line select**

### Shortcut settings

#### ❖ **Left key**

- Assign the key function as: Inbox, Phonebook, Call records, or Alarm.

#### ❖ **Right key**

- Assign the key function as: Inbox, Phonebook, Call records, or Alarm.

#### ❖ **Up key**

- Assign the key function as: Inbox, Phonebook, Call records, or Alarm.

#### ❖ **Down key**

- Assign the key function as: Inbox, Phonebook, Call records, or Alarm.

### Profiles

Lets you choose how your phone behaves in different environment by selecting and customizing a combination of phone settings. Select Standard, Conference, Outdoor, or Mute.

Personal Setting options:

#### ❖ **Ringling tone**

Select Ringing Tone. Press Up or Down arrow keys to select the desired Ring tone. Press **Accept** key to save the setting.

#### ❖ **SMS alert tone**

Select SMS Alert Tone. Press **Up** or **Down** arrow keys to select the desired SMS tone. Press **Accept** key to save the setting.

#### ❖ **Call alert**

Select Call Alert. Press **Up** or **Down** arrow keys to select the desired Alert tone. Press **Accept** key to save the setting.

#### ❖ **Ringling volume**

Select Ringing volume. Press **Right** or **Left** arrow keys to increase/decrease the ringing volume. Press **Back** key to save the setting.

#### ❖ **Key volume**

Select Key volume. Press **Right** or **Left** arrow keys to increase/decrease the ringing volume. Press **Back** key to save the setting.

#### ❖ **Alarm tone**

Select Alarm Tone. Press **Up** or **Down** arrow keys to select the desired alarm tone. Press **Accept** key to save the setting.

## **Alarm**

You can set three alarm times in your phone.

Setting the Alarm clock:

1. Select Alarm menu.
2. Select **Alarm 1, 2, or 3**.
3. Select **On**.
4. Input the time and then press **Accept**.
5. Select **AM** or **PM** and then press **Accept**.
6. Select **One shot alarm** or **Weekly alarm** time setting.
7. Press **Accept**.

In the Weekly alarm setting,

1. Use **Up** or **Down** arrow keys to select the day and then press # key to mark or unmark the day.
2. Press **Accept** to save the setting.